
Atlas & Atlas XL

Baseboard heater covers Installation Guide

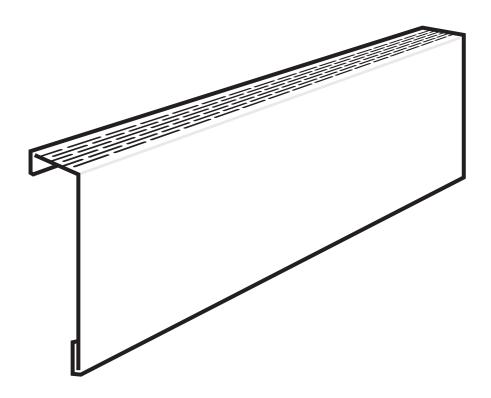




Sharp edges. Watch your fingers.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE ELECTRIC SHOCK, AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:


- 1. Read all instructions before installing or using the cover.
- 2. Sharp edges and corners may be present on the baseboard cover panel. Any sharp edges will be covered after installation using the proper end cap. Please use caution during installation to avoid injury.
- 3. To avoid fire do not block air intakes or exhaust in any manner.
- 4.Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause and electric shock or fire, or damage the heater.
- 5. This heater cover is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, and curtains away from heater.






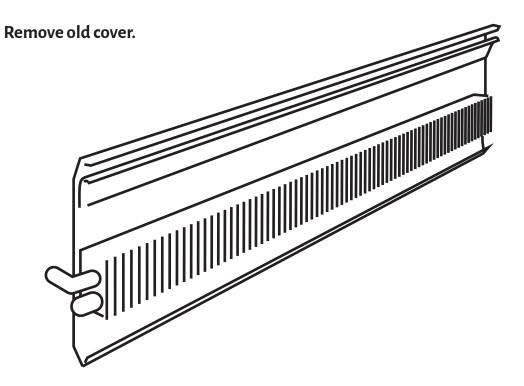


2 Install the new panel

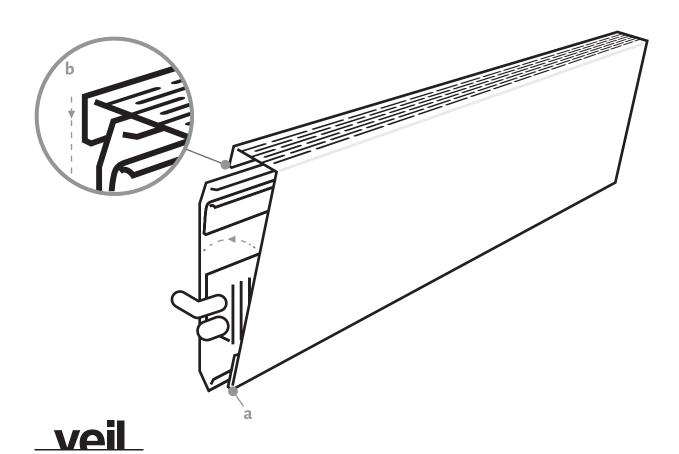


3

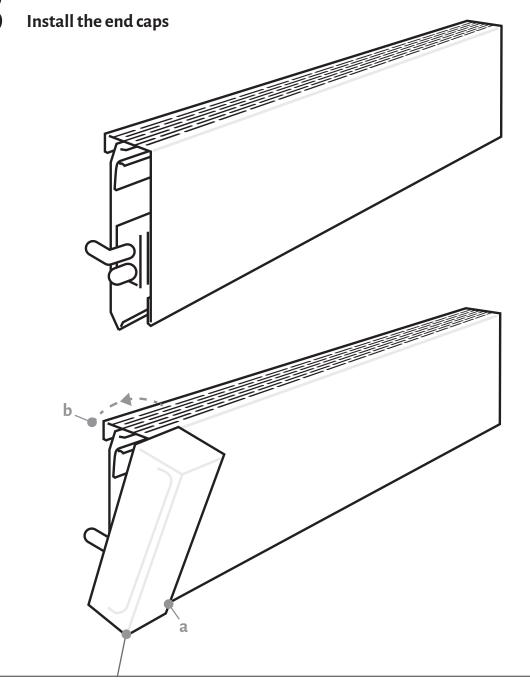


The end cap can be any of these options:

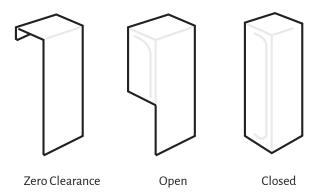

Done!

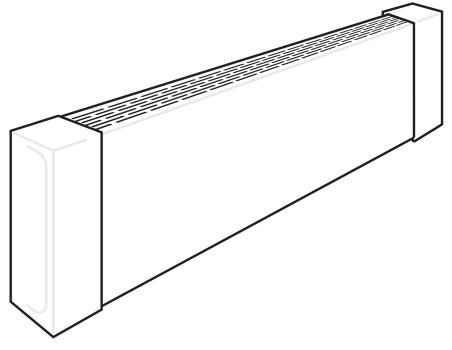


If you do not have an existing back plate, you can use the mounting bracket add-on:

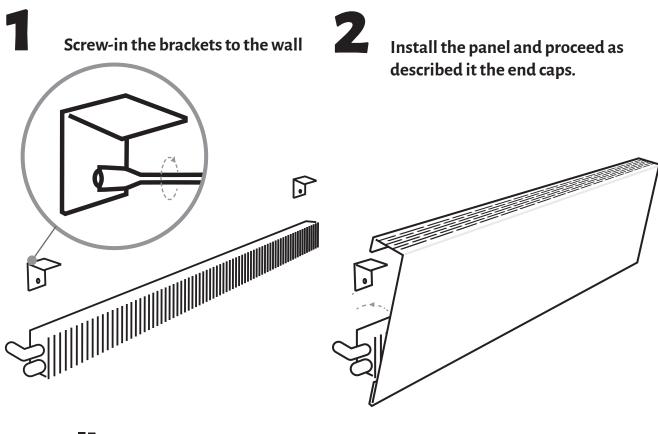




Please make sure there is a clearance of *at least 3/4 inches* between the heater cover and the floor to insure proper air flow.

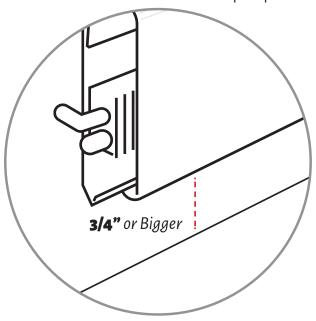


You can join to adjacent panels using the coupler piece:

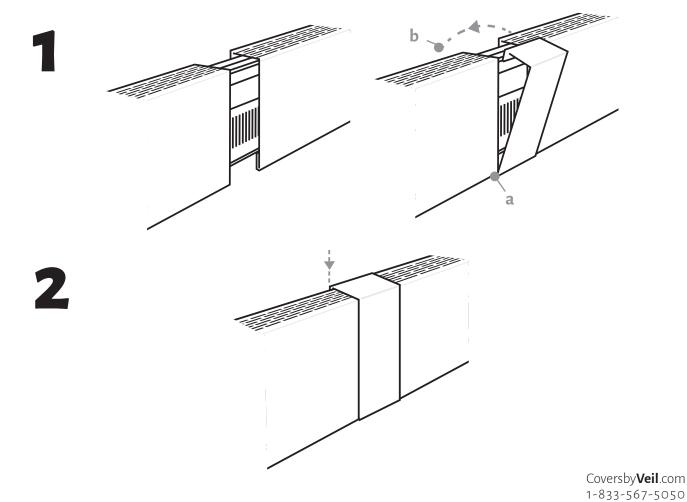



You can join to adjacent panels at an angle using the corner pieces:

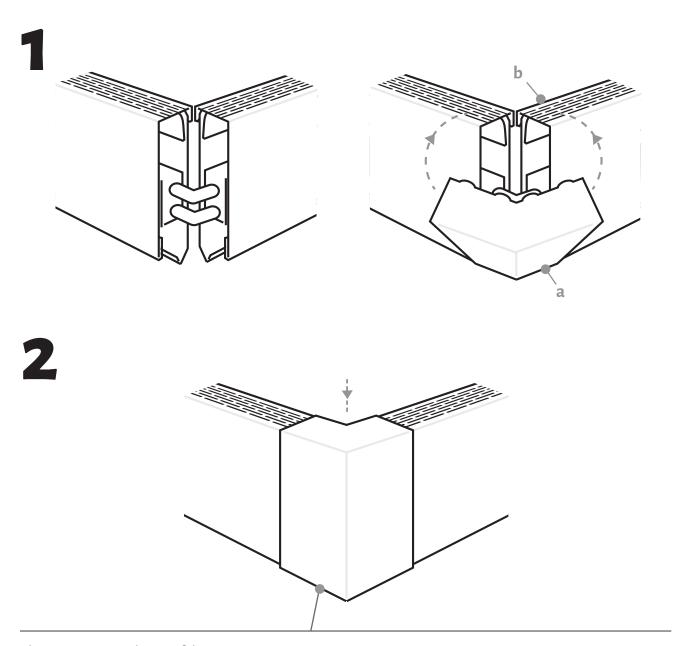

The corner piece can be any of these options:

